



| Originale | Sostituto |
|----------------|----------------------------|
| Power | Power |
| CBL/SAT | AV / Input / RDS |
| DVD | Shift + 2 |
| Tv Audio | Audio / Lang I/II |
| Blu-ray | Shift + Blue / Prime |
| AUX | Shift + 7 |
| Tuner | Shift + 6 |
| Bluetooth | Shift + 9 |
| Game | Shift + Green / APP / |
| 8K | Shift + Yellow / YouTube / |
| Phono | Guide / EPG / -/-- |
| USB | Shift + 8 |
| Media Player | Display / Media |
| CD | Shift + 3 |
| Internet Radio | Shift + 0 |
| Quick Select 1 | TV/Radio / |
| Quick Select 1 | Sound / Title |

| Originale | Sostituto |
|----------------|-----------------------------|
| Quick Select 2 | Picture / Format |
| Quick Select 3 | D.Menu / Top |
| Quick Select 4 | Zoom / Size |
| CH/Page Up | CH+ / Page+ |
| CH/Page Down | CH- / Page- |
| Eco | Smart / List |
| Mute | Mute / Dimmer |
| Volume+ | Vol+ |
| Volume- | Vol- |
| Info | Info / Angle |
| Option | Shift + Setup / OPT / Tools |
| Back | Back / Return |
| Setup | Setup / OPT / |
| Up | Up |
| Down | Down |
| Left | Left |
| Right | Right |












| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|-------------|-----------|-----------------------------|-----------|-------|-----------|---------------|
| | <</Tune- | | << / Preset- | | 7 | | 7 |
| | Play | | Play / Slow | | 8 | | 8 |
| | >> /Tune+ | | >> / Preset+ | | 9 | | 9 |
| | << | | << / Tune- | | 0 | | 0 |
| | Pause | | Pause / Step / Freeze | | Enter | | OK |
| | Stop | | Stop / Hold | | Sleep | | Sleep / Timer |
| | >> | | >> / Tune+ | | | | |
| | Green/Movie | | Green / APP / Repeat | | | | |
| | Red/Music | | Red / Netflix / Search | | | | |
| | Blue/Game | | Blue / Prime Video / Random | | | | |
| | Yellow/Pure | | Yellow / YouTube / Repeat | | | | |
| | 1 | | 1 | | | | |
| | 2 | | 2 | | | | |
| | 3 | | 3 | | | | |
| | 4 | | 4 | | | | |
| | 5 | | 5 | | | | |
| | 6 | | 6 | | | | |





 

 




 

 


 
 


| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  CBL/SAT |  AV / Input / RDS |
|  DVD |  Shift + 2 |
|  Tv Audio |  Audio / Lang I/II |
|  Blu-ray |  Shift + Blue / Prime |
|  AUX |  Shift + 7 |
|  Tuner |  Shift + 6 |
|  Bluetooth |  Shift + 9 |
|  Game |  Blue / Prime Video / Random |
|  8K |  Yellow / YouTube / Repeat |
|  Phono |  Guide / EPG / -/-- |
|  USB |  Shift + 8 |
|  Media Player |  Display / Media |
|  CD |  Shift + 3 |
|  Internet Radio |  Shift + 0 |
|  Internet Radio |  TV/Radio / |
|  Quick Select 1 |  Sound / Title |

| Originale | Sostituto |
|--|--|
|  Quick Select 2 |  Picture / Format |
|  Quick Select 3 |  D.Menu / Top |
|  Quick Select 4 |  Zoom / Size |
|  CH/Page Up |  CH+ / Page+ |
|  CH/Page Down |  CH- / Page- |
|  Mute |  Mute / Dimmer |
|  Volume+ |  Vol+ |
|  Volume- |  Vol- |
|  Up |  Up |
|  Down |  Down |
|  Left |  Left |
|  Right |  Right |
|  Back |  Back / Return |
|  I<</Tune- |  I<< / Preset- |
|  Play |  Play / Slow |
|  >>I/Tune+ |  >>I / Preset+ |
|  << |  << / Tune- |





| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  CBL/SAT |  AV / Input / RDS |
|  DVD |  Shift + 2 |
|  Tv Audio |  Audio / Lang I/II |
|  Blu-ray |  Blue / Prime Video / Random |
|  AUX |  Shift + 7 |
|  Tuner |  Shift + 6 |
|  Bluetooth |  Shift + 9 |
|  Game |  Green / APP / Repeat |
|  8K |  Yellow / YouTube / Repeat |
|  Phono |  Guide / EPG / -/-- |
|  USB |  Shift + 8 |
|  Media Player |  Display / Media |
|  CD |  Shift + 3 |
|  Internet Radio |  Shift + 0 |
|  Internet Radio |  TV/Radio / |
|  Quick Select 1 |  Sound / Title |

| Originale | Sostituto |
|--|--|
|  Quick Select 2 |  Picture / Format |
|  Quick Select 3 |  D.Menu / Top |
|  Quick Select 4 |  Zoom / Size |
|  CH/Page Up |  CH+ / Page+ |
|  CH/Page Down |  CH- / Page- |
|  Mute |  Mute / Dimmer |
|  Volume+ |  Vol+ |
|  Volume- |  Vol- |
|  Up |  Up |
|  Down |  Down |
|  Left |  Left |
|  Right |  Right |
|  Back |  Back / Return |
|  I<</Tune- |  I<< / Preset- |
|  Play |  Play / Slow |
|  >>I/Tune+ |  >>I / Preset+ |
|  << |  << / Tune- |



