



Originale	Sostituto	Originale	Sostituto
Power	Power	Menu	Menu / Home
Mute	Mute / Dimmer	Up/PR+	Up
1	1	PR+	CH+ / Page+
2	2	List	Smart / List
3	3	Vol-	Vol-
4	4	Left	Left
5	5	OK	OK
6	6	Right	Right
7	7	Vol+	Vol+
8	8	Sleep	Sleep / Timer
9	9	Down/PR-	Down
*(Left)	Shift + Left	PR-	CH- / Page-
0	0	P<P	Back / Return
*(Right)	Shift + Right	Tv/AV	AV / Input / RDS
[ ]/Picture	Picture / Format	Tv/PC	TV/Radio /
/j/Sound	Sound / Title	[<>]/ARC	Shift + Picture / Format
I-II	Audio / Lang I/II	Red	Red / Netflix / Search

Originale	Sostituto	Originale	Sostituto
Power	Power	Menu	Menu / Home
Mute	Mute / Dimmer	Up/PR+	Up
1	1	PR+	CH+ / Page+
2	2	List	Smart / List
3	3	Vol-	Vol-
4	4	Left	Left
5	5	OK	OK
6	6	Right	Right
7	7	Vol+	Vol+
8	8	Sleep	Sleep / Timer
9	9	Down/PR-	Down
*(Left)	Shift + Left	PR-	CH- / Page-
0	0	P<P	Back / Return
*(Right)	Shift + Right	Tv/AV	AV / Input / RDS
[ ]/Picture	Picture / Format	Tv/PC	TV/Radio /
/j/Sound	Sound / Title	[<>]/ARC	Shift + Picture / Format
I-II	Audio / Lang I/II	Red	Red / Netflix / Search



