




 

 

 

 



















 






Originale	Sostituto
 Standby	 Power
 USB/Card	 Shift + 8
 Open/Close	 Eject / Surround
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Search	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0/10	 0

Originale	Sostituto
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Display	 Display / Media
 Title	 Sound / Title
 Left	 Left
 Up	 Up
 Right	 Right
 Enter	 OK
 Down	 Down
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Vol+	 Vol+





Originale	Sostituto		
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Angle		Info / Angle
	Mute		Mute / Dimmer
	Vol-		Vol-
	L/R		AV / Input / RDS
	N/P		Text / Goto
	PBC		Smart / List
	Slow	+	Shift + Play /
	V-Mode		D.Menu / Top
	Return		Back / Return
	HD/Res.		Picture / Format
	Program		TV/Radio /
	Zoom		Zoom / Size

Originale	Sostituto

