 







 







 










 

 

 






Originale	Sostituto
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Aspect	 Shift + Picture / Format
 Recall	 Back / Return
 TVG	 Guide / EPG / -/-
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II

Originale	Sostituto
 Display	 Display / Media
 Tv/Radio	 TV/Radio /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 Vol-	 Vol-
 Rec	 Rec / Rec Mode
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Media	 Shift + Display / Media
 Source	 AV / Input / RDS





Originale	Sostituto
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Text	Text / Goto
Hold	+  Shift + Stop /
Reveal	D.Menu / Top
Subpage	Setup / OPT /
Play	Play / Slow
Pause/Timeshift	Pause / Step / Freeze
Stop	Stop / Hold
Index	Info / Angle
Size	Zoom / Size
<<	<< / Tune-
>>	>> / Tune+
<<	<< / Preset-
>>	>>  / Preset+
Red	Red / Netflix / Search

Originale	Sostituto
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

