




















 















































 




 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Vol+	 Vol+
 2	 2	 Vol-	 Vol-
 3	 3	 CH+	 CH+ / Page+
 4	 4	 CH-	 CH- / Page-
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Aspect	 Eject / Surround
 7	 7	 Display	 Display / Media
 8	 8	 Tv/Radio	 TV/Radio /
 9	 9	 Rec	 Rec / Rec Mode
 0	 0	 Up	 Up
 -/--	 Shift + Guide / EPG / -/--	 Left	 Left
 Recall	 Back / Return	 OK/CH List	 OK
 Red	 Red / Netflix / Search	 Right	 Right
 Green	 Green / APP / Repeat	 Down	 Down
 Yellow	 Yellow / YouTube / Repeat	 Menu	 Menu / Home

Originale	Sostituto	Originale	Sostituto
 Power	 Mute / Dimmer	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 PICTURE	 ZOOM	 SLEEP
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 MENU	 ANGLE	 INFO
 OK	 OK	 OK	 OK
 EXIT	 EXIT	 EXIT	 EXIT
 CANCEL	 LIST	 SMART	 CH PAGE
 VOL+	 VOL+	 VOL+	 VOL+
 VOL-	 VOL-	 VOL-	 VOL-
 TV	 DVD	 CD - STB	 TV
 1	 2	 3	 1
 4	 5	 6	 4
 AUX - HDD	 USB	 BLUETOOTH	 AUX - HDD
 7	 8	 9	 7
GUIDE EPG	HDMI - BAT	FAV MARKER	GUIDE EPG
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM
<a href="http://www.mandis.tv">www.mandis.tv</a>			





Originale	Sostituto
Exit	Exit / Cancel / Clear
EPG	Guide / EPG / -/--
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Text	Text / Goto
PVR/Hold	Setup / OPT /
Size	Zoom / Size
FAV	Fav / Marker / PC
Play	Play / Slow
Pause/Timeshift	Pause / Step / Freeze
Stop/Auto	Stop / Hold
Reveal	D.Menu / Top
Subtitle	Subtitle / EQ
<</Nicam	<< / Tune-
>>/Freeze	>> / Tune+
I<</Index	I<< / Preset-

Originale	Sostituto
>>I/Subpage	>>I / Preset+

