


















Originale	Sostituto
	 Mute / Dimmer
	 Fav / Marker / PC
	 Power
	 Info / Angle
	 Smart / List
	 1
	 2
	 3
	 Stop / Hold
	 4
	 5
	 6
	 Subtitle / EQ
	 7
	 8
	 9
	 Display / Media

Originale	Sostituto
	 AV / Input / RDS
	 0
	 Guide / EPG / -/--
	 Shift + Text /
	 Text / Goto
	 CH+ / Page+
	 Up
	 Menu / Home
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Back / Return
	 CH- / Page-
	 Down
	 Setup / OPT /





Originale	Sostituto	Originale	Sostituto
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow / Timer	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Violet	 Shift + Red / Netflix /		
 Picture	 Picture / Format		
 Sound / Title	 Sound / Title		
 PP	 Exit / Cancel / Clear		

Originale	Sostituto

