

















 
















Originale	Sostituto
 Standby	 Shift + Mute / Dimmer
 Mute	 Mute / Dimmer
 ATV	 Shift + AV / Input / RDS
 TV / Radio	 TV/Radio /
 TV Guide	 Guide / EPG / -/-
 USB	 Shift + 8
 S. Mode	 Sound / Title
 USB I<<<	 I<<< / Preset-
 USB >>>	 >>> / Preset+
 USB Stop	 Stop / Hold
 P. Mode	 Picture / Format
 USB <<<	 <<< / Tune-
 USB >>>	 >>> / Tune+
 USB Play/Pause	 Shift + Play /
 USB Play/Pause	 Play / Slow
 AV Source	 AV / Input / RDS
 Up	 Up

Originale	Sostituto
 Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale	Sostituto
	Back / Return
	Fav / Marker / PC
	Vol+
	Subtitle / EQ
	Shift + Picture / Format
	CH+ / Page+
	Vol-
	Audio / Lang I/II
	Sleep / Timer
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Eject / Surround
	Shift + Back / Return

Originale	Sostituto
	Power
	Shift + Power
	Zoom / Size
	Shift + Stop /
	Shift + 3

