
 
 


 











 
 
 

 


 



 

 




 


Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Stop	 Stop	Menu Down	 Down
Slow Up	 Ch +	Progr.	 Sleep
Pause	 Pause	Volume+	 Vol +
Auto/Track	 Smart	Next	 >>
Subt.	 Subt	Volume-	 Vol -
Rep/A-B	 +  Shift + Text	Top Menu	 D. Menu
Title	 List	Prev.	 <<
Repeat/1/All	 Text	1	 1
Zoom	 +  Shift + Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Originale	Sostituto	Originale	Sostituto
8	 8	Lang	 Dual
9	 9	Mark	 +  Shift + 7
+10	 Guide	Clear/00:00	 Exit
0	 0		
C/CH	 Pre Ch		
Record	 Rec		
Rewind	 <<		
Play	 Play		
F.Forward	 >>		
Pbc	 Media		
Np	 3D		
Open/Close	 Eject		
Setup	 Options		
Vocal/Assist	 +  Shift + Vol +		
Tone	 +  Shift + Vol -		
Search	 TV/R		
Angle	 Format		

