



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Info	Info / Angle
0	0
Recall	Back / Return
PMode	Picture / Format
I / II	Audio / Lang I/II
EPG	Guide / EPG / -/--

Originale	Sostituto
Sleep	Sleep / Timer
Input	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
FAV	Fav / Marker / PC
Vol +	Vol+
ADD / DEL	Shift + Back / Return
PR +	CH+ / Page+
Vol -	Vol-
Cancel	Shift + Exit / Cancel / Clear
PR -	CH- / Page-
Red	Red / Netflix / Search





Originale	Sostituto
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Play / Slow
	Shift + Play /
	Stop / Hold
	Setup / OPT /
	Eject / Surround
	Shift + I<< / Preset-
	I<< / Preset-
	<< / Tune-
	Zoom / Size
	Sound / Title
	>>I / Preset+
	Shift + >>I / Preset+
	>> / Tune+
	Shift + Rec / Rec Mode

Originale	Sostituto
	Rec / Rec Mode
	Smart / List

