



 



 



 

 

 

 
 

 



 





| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  Rec |  Rec / Rec Mode |
|  <<< |  <<< / Tune- |
|  >>> |  >>> / Tune+ |
|  I<<< |  I<<< / Preset- |
|  >>>I |  >>>I / Preset+ |
|  S.Mode |  Sound / Title |
|  Audio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  P.Mode |  Picture / Format |
|  Size |  Zoom / Size |
|  Sleep |  Sleep / Timer |
|  Tv/Radio |  TV/Radio / |

| Originale | Sostituto |
|--|--|
|  Index |  D.Menu / Top |
|  Reveal |  Setup / OPT / |
|  Text |  Text / Goto |
|  AV/Source |  AV / Input / RDS |
|  Menu |  Menu / Home |
|  Up |  Up |
|  i/Info |  Info / Angle |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Exit |  Exit / Cancel / Clear |
|  Down |  Down |
|  Back |  Back / Return |
|  Vol+ |  Vol+ |
|  Rec List |  Smart / List |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |



