



 


 



 
 

 
 


 












 

 

 


 
 
 


 
 


 


 
 
 
 
 

 
 
 

 
 


 





 
 

 

 




 
 
 
 
 


 


Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Source / AV		AV
	TV / Radio		TV/R		Info		Info
	TV Guide		Guide		Up		Up
	Mute		Mute		Right		Right
	ATV		Shift + Smart		Down		Down
	USB		Media		Left		Left
	DVD		Smart		OK		Ok
	Eject		Eject		Menu		Menu
	Rec		Rec		Exit		Exit
	Rec List		Shift + Rec		1		1
	I<<		I<<		2		2
	>>I		>>I		3		3
	Stop		Stop		4		4
	<<		<<		5		5
	>>		>>		6		6
	Play / Pause		Play		7		7
	Play / Pause		Pause		8		8





Originale	Sostituto
	9
	0
	Recall
	Fav
	Vol +
	Vol -
	Subtitle
	Aspect
	Audio
	Sleep
	CH +
	CH -
	Red / Goto
	Green / A-B
	Yellow / Angle
	Blue / Repeat
	Blue / Repeat

Originale	Sostituto
	D.Dis
	Zoom
	Size
	Display (Power)
	Text / D.Setup
	Text / D.Setup
	Index / D.Menu
	Reveal / Title
	Hold
	Shift + Info
	Shift + Eject
	3D
	Shift + Power
	Text
	Options
	D. Menu
	List
	Shift + Pause

