



















 







































































Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Epg	 Guide / EPG / -/--	Exit	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Opt?	 Setup / OPT /	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Sleep Timer	 Sleep / Timer	Audio	 Audio / Lang I/II
TV	 TV/Radio /	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Video	 +  Shift + 4	CH/Page-	 CH- / Page-
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
TV/SAT	 AV / Input / RDS	3def	 3
Menu	 Menu / Home	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7

Originale	Sostituto	Originale	Sostituto
OK Enter	 OK	OK Enter	 OK
Menu Right	 Right	Menu Right	 Right
Exit	 Exit / Cancel / Clear	Exit	 Exit / Cancel / Clear
Menu Down	 Down	Menu Down	 Down
Back	 Back / Return	Back	 Back / Return
Volume+	 Vol+	Volume+	 Vol+
Audio	 Audio / Lang I/II	Audio	 Audio / Lang I/II
CH/Page+	 CH+ / Page+	CH/Page+	 CH+ / Page+
Volume-	 Vol-	Volume-	 Vol-
CH/Page-	 CH- / Page-	CH/Page-	 CH- / Page-
1. ?	 1	1. ?	 1
2abc	 2	2abc	 2
3def	 3	3def	 3
4ghi	 4	4ghi	 4
5jkl	 5	5jkl	 5
6mno	 6	6mno	 6
7pqrm	 7	7pqrm	 7



Originale	Sostituto	Originale	Sostituto
8tuv	 8	Sys/Serv	 D.Menu / Top
9wxyz	 9		
Guide Pilote	 +  Shift + Guide / EPG / --		
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
West	 I<< / Preset-		
Dev	 >>I / Preset+		
Freeze	 +  Shift + Pause / Step /		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
East	 Rec / Rec Mode		
Blue	 Blue / Prime Video / Random		
Dec/Pause	 Pause / Step / Freeze		
Lang./Rewind	 << / Tune-		
H/V Play	 Play / Slow		
LNB F.Forward	 >> / Tune+		

