



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 TV / STB	 AV / Input / RDS
 TV / R	 TV/Radio /
 Sleep	 Sleep / Timer
 SUB	 Subtitle / EQ
 TXT	 Text / Goto
 Multi	 Display / Media
 P / N	 Picture / Format
 Recall	 Back / Return
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 7	 7
 8	 8
 9	 9
 0	 0
 SAT	 Shift + 0
 EPG	 Guide / EPG / -/-
 Fav	 Fav / Marker / PC
 PGUP	 CH+ / Page+
 PGDN	 CH- / Page-
 Up	 Up
 Right	 Right
 FAV +	 Vol+
 FAV -	 Vol-
 Down	 Down
 Left	 Left
 OK	 OK
 Menu	 Menu / Home





Originale	Sostituto
	 Exit / Cancel / Clear
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Pause / Step / Freeze
	 Zoom / Size
	 D.Menu / Top
	 Info / Angle
	 Shift + 8
	 Shift + Yellow / YouTube /
	 Shift + Text /
	 Shift + 1
	 Shift + 2
	 Eject / Surround
	 Stop / Hold
	 Rec / Rec Mode

Originale	Sostituto
	 Sound / Title
	 << / Tune-
	 >> / Tune+
	 Smart / List
	 Play / Slow
	 I<< / Preset-
	 Setup / OPT /
	 >>I / Preset+

