



Originale	Sostituto	Originale	Sostituto
Power	Power	Left	Left
Mute	Mute / Dimmer	OK	OK
1	1	Right	Right
2	2	Sel	Smart / List
3	3	Down	Down
4	4	FAV	Fav / Marker / PC
5	5	Audio	Audio / Lang I/II
6	6	Pause	Pause / Step / Freeze
7	7	Red/Subtitle	Red / Netflix / Search
8	8	AV	AV / Input / RDS
9	9	TV/R	TV/Radio /
Quality/P-	CH- / Page-	Blue/Info	Blue / Prime Video / Random
0	0	Green/PIP	Green / APP / Repeat
Recall/P+	CH+ / Page+	Yellow/EPG	Yellow / YouTube / Repeat
Menu	Menu / Home		
Exit	Exit / Cancel / Clear		
Up	Up		

Originale	Sostituto	Originale	Sostituto
Left	Left	Left	Left
OK	OK	Right	Right
Right	Right	Sel	Smart / List
Sel	Smart / List	Down	Down
Down	Down	FAV	Fav / Marker / PC
FAV	Fav / Marker / PC	Audio	Audio / Lang I/II
Audio	Audio / Lang I/II	Pause	Pause / Step / Freeze
Pause	Pause / Step / Freeze	Red/Subtitle	Red / Netflix / Search
Red/Subtitle	Red / Netflix / Search	AV	AV / Input / RDS
AV	AV / Input / RDS	TV/R	TV/Radio /
TV/R	TV/Radio /	Blue/Info	Blue / Prime Video / Random
Blue/Info	Blue / Prime Video / Random	Green/PIP	Green / APP / Repeat
Green/PIP	Green / APP / Repeat	Yellow/EPG	Yellow / YouTube / Repeat
Yellow/EPG	Yellow / YouTube / Repeat		

