



Originale	Sostituto
Power	Power
Source	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV	TV/R
Recall	Pre Ch
Vol+	Vol +
Vol-	Vol -
Mute	Mute

Originale	Sostituto
World/Internet	Smart
P+	Ch +
P-	Ch -
Menu	Menu
Q.Menu	D. Menu
Back	Back
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
i	Info
Photo/Music/Cam	Media
Guide	Guide
*/O	Format
*/Q	3D





Originale	Sostituto
 [=]/Text	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Lang	 Dual
 [=].	 Subt
 [-O-]	 Eject
 <<	 <<
 Pause	 Pause
 >>	 >>
 Rec	 Rec
 Play	 Play
 Stop	 Stop

Originale	Sostituto

