



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Up		Up
	Play		Play / Slow		i		Info / Angle
	Pause		Pause / Step / Freeze		Left		Left
	Stop		Stop / Hold		OK		OK
	Rec		Rec / Rec Mode		Right		Right
	<<		<< / Tune-		Exit		Exit / Cancel / Clear
	>>		>> / Tune+		Down		Down
	Lang		Audio / Lang I/II		Back		Back / Return
	Source (Games)		Eject / Surround		Vol+		Vol+
	Movie-Music-Phot		Picture / Format		World (Violet)		Smart / List
	[≡]..		Zoom / Size		PR+		CH+ / Page+
	*/O		Sleep / Timer		Vol-		Vol-
	TV		TV/Radio /		*/Q		Display / Media
	Q.Menu		D.Menu / Top		PR-		CH- / Page-
	[-O-]		Setup / OPT /		1		1
	[≡]/Text		Text / Goto		2		2





	Originale	Sostituto		Originale	Sostituto
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Guide		Guide / EPG / -/--		
	0		0		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Recall		Shift + Back / Return		

	Originale	Sostituto		Originale	Sostituto

