


 
 


 

 






 












Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Goto	 Media
 Eject	 Eject	 Setup	 Options
 Mute	 Mute	 Angle	 Format
 OSD / Info	 Info	 Text / Title	 Text
 V-Mode	 Smart	 Subtitle	 Subt
 P/N / Fav	 Pre Ch	 Menu	 Menu
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 PBC / EPG	 Guide
 7	 7	 Source	 AV
 8	 8	 Exit	 Exit
 9	 9	 <<	 <<
 0	 0	 >>	 >>
 10+	 Shift + Guide	 Play / Pause	 Play



