


 
 





 
 

 
 



 
 


 





 


 

 




 




 










 






Originale	Sostituto	Originale	Sostituto
 Power	 Power	 OK	 Ok
 Mute	 Mute	 Up	 Up
 Movie	 1	 Down	 Down
 Music	 2	 Right	 Right
 Photo	 3	 Left	 Left
 Home	 Smart	 Stop	 Stop
 Disk	 Menu	 Pause	 Pause
 All Media	 Media	 <<	 <<
 Subtitle	 Subt	 >>	 >>
 Audio	 Dual	 I<<	 I<<
 Zoom	 Eject	 >>I	 >>I
 Info	 Info	 Repeat	 Text
 Copy Target	 Pre Ch	 Tv Out	 TV/R
 Vol+	 Vol +	 Setup	 Options
 Vol-	 Vol -	 A-B	 D. Menu
 P+	 Ch +	 BGM/Go to	 Format
 P-	 Ch -	 Slide Type	 Guide

Originale	Sostituto	Originale	Sostituto
 OK	 Ok	 TV	 AUX
 Up	 Up	 DVD	 SAT
 Down	 Down	 PLAY MODE	 REC MODE
 Right	 Right	 Play	 Pause
 Left	 Left	 Stop	 FF
 Stop	 Stop	 FR	 Eject
 Pause	 Pause	 DISC NAV	 SOUND
 <<	 <<	 AD	 SETTINGS
 >>	 >>	 LIST	 DUAL
 I<<	 I<<	 SUBT	 OPT
 >>I	 >>I	 PROG	 SEARCH
 Repeat	 Text	 PICTURE	 ECO
 Tv Out	 TV/R	 SLEEP	 TV/R
 Setup	 Options	 FORMAT	 3D
 A-B	 D. Menu	 E-MANUAL	 TIMER
 BGM/Go to	 Format	 D.MENU	 REPEAT
 Slide Type	 Guide	 ZOOM	 TEXT

