



| Originale      | Sostituto        | Originale   | Sostituto             |
|----------------|------------------|-------------|-----------------------|
| Power          | Power            | Angle/Audio | Audio / Lang I/II     |
| Open/Close     | Eject / Surround | Angle/Audio | Info / Angle          |
| 1              | 1                | Prog/Repeat | Green / APP / Repeat  |
| 2              | 2                | Prog/Repeat | TV/Radio /            |
| 3              | 3                | Setup       | Setup / OPT /         |
| 4              | 4                | Stop        | Stop / Hold           |
| 5              | 5                | Play        | Play / Slow           |
| 6              | 6                | Pause       | Pause / Step / Freeze |
| 7              | 7                | Left        | Left                  |
| 8              | 8                | Up          | Up                    |
| 9              | 9                | Right       | Right                 |
| Menu/Zoom      | Zoom / Size      | OK          | OK                    |
| Menu/Zoom      | Menu / Home      | Down        | Down                  |
| 0              | 0                | <<          | << / Tune-            |
| USB            | +  8 Shift + 8   | >>          | >> / Tune+            |
| Title/Subtitle | Sound / Title    | Vol+        | Vol+                  |
| Title/Subtitle | Subtitle / EQ    | I<<         | I<< / Preset-         |

| Originale   | Sostituto            | Originale   | Sostituto             |
|-------------|----------------------|-------------|-----------------------|
| Angle/Audio | Audio / Lang I/II    | Angle/Audio | Info / Angle          |
| Prog/Repeat | Green / APP / Repeat | Prog/Repeat | TV/Radio /            |
| Setup       | Setup / OPT /        | Stop        | Stop / Hold           |
| Play        | Play / Slow          | Pause       | Pause / Step / Freeze |
| Left        | Left                 | Up          | Up                    |
| Right       | Right                | OK          | OK                    |
| Down        | Down                 | <<          | << / Tune-            |
| >>          | >> / Tune+           | Vol+        | Vol+                  |
| I<<         | I<< / Preset-        |             |                       |



