




 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Right	 Right
 Open/Close	 Eject	 Left	 Left
 Source	 AV	 Mute	 Mute
 Break	 Smart	 Vol+	 Vol +
 Play	 Play	 Vol-	 Vol -
 Stop	 Stop	 Treble+	 Ch +
 Pause	 Pause	 Treble-	 Ch -
 >>	 >>	 O))/Audio	 Dual
 <<	 <<	 [...] /Subtitle	 Subt
 >>	 >>	 Angle	 Yellow
 <<	 <<	 Visual Info	 Red
 Menu	 Menu	 Visual Adjust	 Green
 Return	 Back	 <	 Shift + Left
 Setup	 Options	 Color Mode	 Format
 Enter	 Ok	 >	 Shift + Right
 Up	 Up	 Image On/Off	 Text
 Down	 Down	 Top Menu	 Shift + Menu

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Right	 Right
 Open/Close	 Eject	 Left	 Left
 Source	 AV	 Mute	 Mute
 Break	 Smart	 Vol+	 Vol +
 Play	 Play	 Vol-	 Vol -
 Stop	 Stop	 Treble+	 Ch +
 Pause	 Pause	 Treble-	 Ch -
 >>	 >>	 O))/Audio	 Dual
 <<	 <<	 [...] /Subtitle	 Subt
 >>	 >>	 Angle	 Yellow
 <<	 <<	 Visual Info	 Red
 Menu	 Menu	 Visual Adjust	 Green
 Return	 Back	 <	 Shift + Left
 Setup	 Options	 Color Mode	 Format
 Enter	 Ok	 >	 Shift + Right
 Up	 Up	 Image On/Off	 Text
 Down	 Down	 Top Menu	 Shift + Menu





	Originale	Sostituto		Sostituto
On Screen	On Screen	SEARCH TV/R		TV/R
Sleep	Sleep	PROG SLEEP		Sleep
Wide/Normal	Wide/Normal	ECO 3D		3D
Dimmer	Dimmer	APP MEDIA		Media
Sound Mode	Sound Mode	DISC NAV LIST		List
Progressive	Progressive	DISPLAY INFO		Info
Playback	Playback	FAV PRE-CH		Pre Ch
Repeat	Repeat	SHIFT + REPEAT TEXT		Shift + Text
Play Mode	Play Mode	SHIFT + PLAY MODE		Shift + Play
DVD Level	DVD Level	SHIFT + -/++ GUIDE		Shift + Guide
Cancel	Cancel	CLEAR EXIT		Exit
On Screen	1	1		1
Sleep	2	2		2
Wide/Normal	3	3		3
Dimmer	4	4		4
Repeat	5	5		5
Sound Mode	6	6		6

	Originale	Sostituto		Sostituto
Cancel	7	7		7
Play Mode	8	8		8
Progressive	9	9		9
Playback	0	0		0
DVD Level	+10	-/++ GUIDE		Guide

