


 
 
 
 
 

 



Originale		Sostituto		Originale		Sostituto	
	Power		Power		6		Shift + Help /
	Source Search		Source		7		Shift + Eco / Aspect
	Help		Help / Info		8		Shift + 3D /
	Menu		Menu		9		Shift + Blank / Mute
	Up		Up		0		Shift + Comp / Video
	Down		Down		Freeze		Freeze / Timer
	Right		Right		Color Mode		Mode
	Left		Left		E-Zoom+		+ / Play
	Enter/Auto		Enter		E-Zoom-		- / Stop
	ESC		Comp / Video		A/V Mute		Blank / Mute
	Vol+		Vol + / Page +		Aspect		Eco / Aspect
	Vol-		Vol - / Page -				
	1		Shift + Vol + / Page +				
	2		Shift + + / Play				
	3		Shift + Volt / Focus				
	4		Shift + Vol - / Page -				
	5		Shift + - / Stop				

