
 






Originale	Sostituto	Originale	Sostituto
 Power	 Power	 TV	 Shift + 1
 1	 1	 Up / P+	 Shift + Up
 2	 2	 Up / P+	 Up
 3	 3	 AV	 AV / Input / RDS
 4	 4	 Left / V-	 Left
 5	 5	 Left / V-	 Shift + Left
 6	 6	 Menu	 Menu / Home
 7	 7	 Menu	 Shift + Menu /
 8	 8	 Right / V+	 Right
 9	 9	 Right / V+	 Shift + Right
 Mute	 Mute / Dimmer	 S / M / D	 Exit / Cancel / Clear
 0	 0	 Down / P-	 Shift + Down
 16:9	 Picture / Format	 Down / P-	 Down
 Red	 Red / Netflix / Search	 Recall	 Back / Return
 Green	 Green / APP / Repeat	 Recall	 Shift + Back / Return
 Yellow	 Yellow / YouTube / Repeat	 i	 Info / Angle
 Blue	 Blue / Prime Video / Random	 ≡0	 Subtitle / EQ





Originale		Sostituto	
	≡i	Shift + Info / Angle	
	PP	Sound / Title	
	≡	Text / Goto	
	/≡	Setup / OPT /	
	Hold	Stop / Hold	
	Size	Zoom / Size	
	≡X	Sleep / Timer	
	≡?	D.Menu / Top	

Originale	Sostituto

