



Originale	Sostituto
PP	Back / Return
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / --
Menu [M]	Menu / Home
Info [i]	Info / Angle
I-II	Audio / Lang I/II

Originale	Sostituto
Mute	Mute / Dimmer
Left	Left
Up	Up
Right	Right
OK	OK
Down	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
Red / Sound	Red / Netflix / Search
Red / Sound	Sound / Title
Green / Picture	Green / APP / Repeat
Green / Picture	Picture / Format
Yellow / Feature	Yellow / YouTube / Repeat
Blue / Install	Blue / Prime Video / Random
Text	Text / Goto





Originale	Sostituto
[≡o]	TIMER SLEEP Sleep / Timer
Hold	HOLD Stop / Hold
[≡X]	CLEAR EXIT CANCEL Exit / Cancel / Clear
Mix / PIP Swap	LIST SMART Smart / List
PIP / Size	SIZE ZOOM Zoom / Size
PIP Down / [≡?]	PRESET- I<< / Preset-
PIP Up / Index	PRESET+ >>I / Preset+
[TV]	PROGRAM TV/RADIO TV/ Radio /
[AV]	RDS AV INPUT AV / Input / RDS

Originale	Sostituto

