



 
Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 TV / STB	 AV / Input / RDS
 TV / R	 TV/Radio /
 Sleep	 Sleep / Timer
 SUB	 Subtitle / EQ
 TXT	 Text / Goto
 Multi	 Display / Media
 P / N	 Picture / Format
 Recall	 Back / Return
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 7	 7
 8	 8
 9	 9
 0	 0
 SAT	 Shift + 0
 EPG	 Guide / EPG / -/-
 Fav	 Fav / Marker / PC
 PGUP	 CH+ / Page+
 PGDN	 CH- / Page-
 Up	 Up
 Right	 Right
 FAV +	 Vol+
 FAV -	 Vol-
 Down	 Down
 Left	 Left
 OK	 OK
 Menu	 Menu / Home





Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Zoom	 Zoom / Size
 Edit	 D.Menu / Top
 Info	 Info / Angle
 USB	 Shift + 8
 A - B	 Shift + Yellow / YouTube /
 Goto	 Shift + Text /
 OGG	 Shift + 1
 JPEG	 Shift + 2
 PIP	 Eject / Surround
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode

Originale	Sostituto
 T.S.	 Sound / Title
 <<	 << / Tune-
 >>	 >> / Tune+
 PVR List	 Smart / List
 Play / Pause	 Play / Slow
 I<<	 I<< / Preset-
 >I<	 Setup / OPT /
 >>I	 >>I / Preset+

