










 
 
 







 






 


 







Originale	Sostituto
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 List	 Smart / List
 Vol+	 Vol+
 Info/Display	 Display / Media
 Info/Display	 Info / Angle

Originale	Sostituto
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Zoom/Aspect	 Shift + Zoom /
 Zoom/Aspect	 Picture / Format
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK/Enter	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Source	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat





Originale		Sostituto	
	Blue		Blue / Prime Video / Random
	TTX		Text / Goto
	Index		D.Menu / Top
	Hold		Shift + Stop /
	I/II/Audio		Audio / Lang I/II
	Repeat/Rec		Rec / Rec Mode
	Repeat/Rec		Shift + Green / APP /
	Stop/Reveal		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Size		Zoom / Size
	Subtitle		Subtitle / EQ
	<</Subpage		<< / Tune-
	>>		>> / Tune+
	Tv/Radio		TV/Radio /
	I<<		I<< / Preset-
	EPG		Guide / EPG / -/--

Originale		Sostituto	
	>>I		>>I / Preset+
	FAV		Fav / Marker / PC

