 

 



 

 

 

 

 

 

 

 

 
 

 


 









Originale	Sostituto
 Standby	 Power
 Auto	 Smart / List
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Aspect	 Shift + Picture / Format

Originale	Sostituto
 Audio	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 FAV	 Fav / Marker / PC





Originale	Sostituto
FAV-	Shift + CH PAGE / -
FAV+	Shift + CH PAGE / +
EPG	Guide / EPG / -/--
TEXT	Text / Goto
HOLD	Shift + Stop /
TV/RADIO	TV/Radio /
SUBTITLE	Subtitle / EQ
INDEX	Info / Angle
SIZE	Zoom / Size
REVEAL	Setup / OPT /
SUBPAGE	Eject / Surround
MEDIA	Shift + Display / Media
Play	Play / Slow
Pause	Pause / Step / Freeze
<<>>	<<>> / Tune-
>>>	>>> / Tune+
Rec	Rec / Rec Mode

Originale	Sostituto
Stop	Stop / Hold
I<<<	I<<< / Preset-
>>>	>>> / Preset+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

