 

 

 


 




 





 

 

 

 

 



 





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Tv/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Pause	 Pause / Step / Freeze
 CH Set	 Smart / List
 Page >	 CH+ / Page+
 < Page	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up/CH+	 Up
 Down/CH-	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-

Originale	Sostituto
 Red/Last	 Red / Netflix / Search
 Green/TTX	 Green / APP / Repeat
 Yellow/PIP	 Yellow / YouTube / Repeat
 Blue/Zoom	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Back	 Back / Return
 EPG	 Guide / EPG / -/-
 Info	 Info / Angle





Originale		Sostituto	
	SIG		Display / Media
	FAV		Fav / Marker / PC
	SAT		Shift + 0

Originale		Sostituto	

