











 

















 











 





























Originale		Sostituto		Originale		Sostituto	
	POWER		Power		PAGE+ / Zoom		Zoom / Size
	MUTE		Mute / Dimmer		EXIT		Exit / Cancel / Clear
	1		1		EPG		Guide / EPG / -/-
	2		2		PAGE-		Shift + CH- /
	3		3		Up / PR+		CH+ / Page+
	4		4		Up / PR+		Up
	5		5		Left / VOL-		Vol-
	6		6		Left / VOL-		Left
	7		7		OK / List		OK
	8		8		Right / VOL+		Vol+
	9		9		Right / VOL+		Right
	TV/RADIO		TV/Radio /		FAV		Fav / Marker / PC
	0		0		Down / PR-		CH- / Page-
	<-PR		Back / Return		Down / PR-		Down
	MENU		Menu / Home		Pause		Pause / Step / Freeze
	INFO		Info / Angle		Func / SAT		Display / Media
	PAGE+ / Zoom		Shift + CH+ /		SAT		Smart / List

Page+



