
 












 
 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu
	FAV		Pre Ch		i		Info
	TV / RAD		TV/R		EPG		Guide
	SUB		Subt		Page +		>>
	Mute		Mute		Page -		<<
	Up / Channel +		Up		AV		AV
	Up / Channel +		Ch +		Audio		Dual
	Down / Channel -		Down		Pause		Pause
	Down / Channel -		Ch -		Red		Red
	Right / Vol +		Right		Green		Green
	Right / Vol +		Vol +		Yellow		Yellow
	Left / Vol -		Left		Blue		Blue
	Left / Vol -		Vol -		1		1
	OK		Ok		2		2
	Text		Text		3		3
	List		Media		4		4
	Back		Back		5		5





	Originale	Sostituto		Originale	Sostituto
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		

