


 

 

 

 







 
 





Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Back	 Back
 Fav	 Pre Ch
 Menu	 Menu
 Exit	 Exit
 EPG	 Guide

Originale	Sostituto
 i	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / List	 Ok
 OK / List	 List
 V +	 Vol +
 V -	 Vol -
 TV / R	 TV/R
 SAT	 AV
 P +	 Ch +
 P -	 Ch -
 Red / F1	 Red
 Green / F2	 Green
 Yellow / F3	 Yellow
 Blue / F4	 Blue




**Originale**
**Sostituto**

	Audio		Dual
	Subtitle		Subt
	Text		Text
	Pause		Pause
	UHF		Format
	Parab		3D
	M1	 + 	Shift + 1
	N / P		Options
	Timer / Sleep	 + 	Shift + Power

**Originale**
**Sostituto**