



Originale	Sostituto
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 List	 Smart / List
 Vol+	 Vol+
 Info/Display	 Display / Media
 Info/Display	 Info / Angle

Originale	Sostituto
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Zoom/Aspect	 Shift + Zoom /
 Zoom/Aspect	 Picture / Format
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK/Enter	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Source	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat





Originale	Sostituto
	Blue / Prime Video / Random
	Text / Goto
	D.Menu / Top
	Shift + Stop /
	Audio / Lang I/II
	Rec / Rec Mode
	Shift + Green / APP /
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	Zoom / Size
	Subtitle / EQ
	<< / Tune-
	>> / Tune+
	TV/Radio /
	I<< / Preset-
	Guide / EPG / -/--

Originale	Sostituto
	>>I / Preset+
	Fav / Marker / PC

