 










 


 



 

















 

 

 































Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	[≡]		Text / Goto		Source		AV / Input / RDS
	[≡?]		D.Menu / Top		ATV		Shift + Smart / List
	[...]		Subtitle / EQ		DTV		Shift + Display / Media
	[≡+]		Eject / Surround		EPG		Guide / EPG / -/-
	[≡o]		Sound / Title		Radio		TV/Radio /
	[≡◆]		Zoom / Size		I/II/I+II/▼/O)		Audio / Lang I/II
	1		1		Vol+		Vol+
	2		2		P+		CH+ / Page+
	3		3		P.Info		Display / Media
	4		4		Mute		Mute / Dimmer
	5		5		Vol-		Vol-
	6		6		P-		CH- / Page-
	7		7		[i+]		Info / Angle
	8		8		[<>]		Picture / Format
	9		9		Sleep		Sleep / Timer
	Recall		Fav / Marker / PC		AV Mode		Shift + AV / Input / RDS





Originale	Sostituto	Originale	Sostituto
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	End		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Action		Smart / List
	Power Aquos Link	+	Shift + Power
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Option		Setup / OPT /
	Rec		Rec / Rec Mode
	Rec Stop	+	Shift + Stop /
	Stop		Stop / Hold

