




Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info
 Guide	 Guide
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +

Originale	Sostituto
 CH-	 Ch -
 >>I	 >>I
 I<<	 I<<
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/List	 Ok
 Menu	 Menu
 Back	 Back
 Red/Text	 Red
 Green/Audio	 Green
 Yellow/Sub	 Yellow
 Blue/Find	 Blue
 <<	 <<
 Play	 Play
 Pause	 Pause





	Originale	Sostituto
	>>	>>
	Stop	Stop
	Rec	REC MODE Rec
	PVR	HOME SMART Smart
	FAV	FAV PRE-CH Pre Ch
	[+]/Ratio	ECO 3D 3D
	Page Up	SHIFT +  Shift + Up
	Page Down	SHIFT +  Shift + Down
	[v]/Edit	APP MEDIA Media
	F1/Tv/Radio	SEARCH TV/R TV/R
	F2/Input	TIMER AV AV
	F3	AD SUBT Subt
	F4	SETTINGS OPT Options

	Originale	Sostituto

