 
 



 






 


 
 

 
 
 


 




 









Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Format	 Format
 SAT	 Smart
 TV/STB	 Media
 TV/Radio	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Back	 Back

Originale	Sostituto
 EPG	 Guide
 Menu	 Menu
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Exit	 Exit
 CH+ />>>I	 Ch +
 CH- /I<<<	 Ch -
 Red/Text	 Red
 Green/Audio	 Green
 Yellow/Sub.T	 Yellow
 Blue/Find	 Blue





	Originale	Sostituto	Originale	Sostituto
	Edit	 3D		
	OPT	 Options		
	USB/PVR	 AV		
	FAV	 Pre Ch		
	<<	 <<		
	Play	 Play		
	Pause	 Pause		
	>>	 >>		
	Stop	 Stop		
	Pg Dn	 I<<		
	Pg Up	 >>I		
	Rec	 Rec		

