

 



 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Down / CH-	 Ch -
 Mute	 Mute	 Right / Vol+	 Right
 1	 1	 Right / Vol+	 Vol +
 2	 2	 Left / Vol-	 Left
 3	 3	 Left / Vol-	 Vol -
 4	 4	 OK / Store	 Ok
 5	 5	 P-	 Shift + Ch -
 6	 6	 P+	 Shift + Ch +
 7	 7	 EPG	 Guide
 8	 8	 Back	 Back
 9	 9	 i	 Info
 0	 0	 Subtitle	 Subt
 Menu	 Menu	 Text	 Text
 Exit	 Exit	 Aspect	 Format
 Up / CH+	 Up	 Picture	 Shift + Format
 Up / CH+	 Ch +	 Audio	 Dual
 Down / CH-	 Down	 Sleep	 Sleep

Originale	Sostituto	Originale	Sostituto
 Down / CH-	 Ch -	 TV	 AUX
 Right / Vol+	 Right	 DVD	 REC MODE
 Right / Vol+	 Vol +	 PLAY	 STOP
 Left / Vol-	 Left	 PAUSE	 EJECT
 Left / Vol-	 Vol -	 SKIP BACKWARD	 SKIP FORWARD
 OK / Store	 Ok	 DISC NAV	 SOUND
 P-	 Shift + Ch -	 AD	 SETTINGS
 P+	 Shift + Ch +	 LIST	 DUAL
 EPG	 Guide	 SUBT	 OPT
 Back	 Back	 PROG	 SEARCH
 i	 Info	 PICTURE	 ECO
 Subtitle	 Subt	 SLEEP	 TV/R
 Menu	 Menu	 E-MANUAL	 REPEAT
 Exit	 Exit	 ZOOM	 TIMER
 Up / CH+	 Up	 D.MENU	 TEXT
 Up / CH+	 Ch +	 TOP MENU	 DISPLAY INFO
 Down / CH-	 Down	 MENU	 INFO
		 OK	 CLEAR
		 EXIT	 RETURN BACK
		 VOL+	 HOME
		 VOL-	 SMART
		 1	 APP
		 2	 MEDIA
		 3	 CH-
		 4	 +
		 5	 CH+
		 6	 1
		 7	 2
		 8	 3
		 9	 4
		 0	 5
		 FAV	 6
		 PRE-CH	 7
		 A	 8
		 B	 9
		 C	 0
		 D	 FAV
			
			





Originale	Sostituto
 Red / TV/Radio	 Red
 Red / TV/Radio	 TV/R
 Green / FAV	 Green
 Green / FAV	 Pre Ch
 Yellow / List	 Yellow
 Yellow / List	 List
 Blue / +/-	 Blue
 All CH	 Smart
 White / ?	 Options

Originale	Sostituto

