 




 







 















 



Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 World/Internet	 Smart / List
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Camera/Music/Ph	 Picture / Format
 Guide	 Guide / EPG / -/-
 */o	 Shift + Guide / EPG / -/-
 */o..	 Fav / Marker / PC





	Originale	Sostituto	Originale	Sostituto
	[≡]/Text	 GOTO TEXT		Text / Goto
	Red	 NETFLIX SEARCH		Red / Netflix / Search
	Green	 APP REPEAT		Green / APP / Repeat
	Yellow	 YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM		Blue / Prime Video / Random
	Lang	 LANG I/II AUDIO		Audio / Lang I/II
	[≡]..	 SHIFT + GOTO TEXT		Shift + Text /
	[-o-]	 OPT-TOOLS SETUP		Setup / OPT /
	<<	 TUNE- TUNE-		<< / Tune-
	Pause	 STEP-FREEZE STEP-FREEZE		Pause / Step / Freeze
	>>	 TUNE+ TUNE+		>> / Tune+
	Rec	 REC MODE REC MODE		Rec / Rec Mode
	Play	 SLOW SLOW		Play / Slow
	Stop	 HOLD HOLD		Stop / Hold

