









 





 


 






 



 

 

 
 


 



 

 

 

 

 

 







 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		i/Info		Info / Angle
	1		1		PR-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Up		Up
	4		4		Q.Menu		D.Menu / Top
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	0		0		World		Smart / List
	Recall		Fav / Marker / PC		Music Photo		Display / Media
	Vol+		Vol+		Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer		*/o		Setup / OPT /
	PR+		CH+ / Page+		*/o..		Zoom / Size





Originale	Sostituto	Originale	Sostituto
 ≡/Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Lang	 Audio / Lang I/II		
 [≡]..	 Subtitle / EQ		
 [-O-]	 Picture / Format		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

