

 


 



 


 

 

 
 

 



 

 


 





 

 


 
 









 


 


 





Originale	Sostituto
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV	 TV/R
 Recall	 Pre Ch
 V +	 Vol +
 V -	 Vol -
 Mute	 Mute

Originale	Sostituto
 i	 Info
 P +	 Ch +
 P -	 Ch -
 Menu	 Menu
 Q.Menu	 D. Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Back	 Back
 Exit	 Exit
 World	 Smart
 Music/Camera/Ph	 Media
 Guide	 Guide
 Fav 1 / O	 Shift + 1
 Fav 2 / Q	 Shift + 2





Originale		Sostituto		Originale		Sostituto	
	[≡]/Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Lang		Dual				
	Dialog		Subt				
	-[O]-		Options				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

