






Originale	Sostituto
	 Mute / Dimmer
	 Fav / Marker / PC
	 Power
	 Info / Angle
	 Smart / List
	 1
	 2
	 3
	 Stop / Hold
	 4
	 5
	 6
	 Subtitle / EQ
	 7
	 8
	 9
	 Display / Media

Originale	Sostituto
	 AV / Input / RDS
	 0
	 Guide / EPG / -/--
	 Shift + Text /
	 Text / Goto
	 CH+ / Page+
	 Up
	 Menu / Home
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Back / Return
	 CH- / Page-
	 Down
	 Setup / OPT /





Originale	Sostituto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow / Timer	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Violet	Shift + Red / Netflix /
Picture	Picture / Format
Musical note	Sound / Title
PP	Exit / Cancel / Clear

Originale	Sostituto

