
 



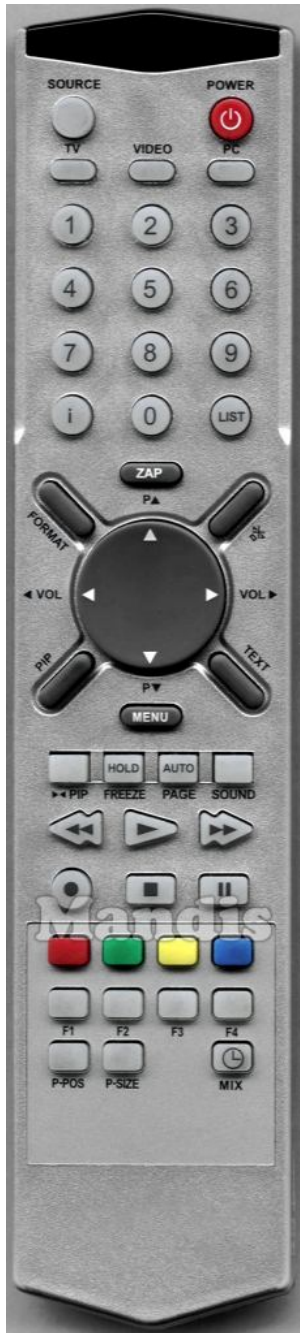 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 ZAP	 Pre Ch
 Source	 AV	 Format	 Format
 TV	 TV/R	 Mute	 Mute
 VIDEO	 Smart	 PIP	 3D
 PC	 Media	 Text	 Text
 1	 1	 Up / P+	 Up
 2	 2	 Up / P+	 Ch +
 3	 3	 Down / P-	 Down
 4	 4	 Down / P-	 Ch -
 5	 5	 Right / Vol+	 Right
 6	 6	 Right / Vol+	 Vol +
 7	 7	 Left / Vol-	 Left
 8	 8	 Left / Vol-	 Vol -
 9	 9	 Menu	 Menu
 0	 0	 PIP Swap	 Back
 i	 Info	 Auto	 Options
 List	 List	 Sound	 Dual

Originale	Sostituto	Originale	Sostituto
 ZAP	 Pre Ch	 ZAP	 Pre Ch
 Format	 Format	 Format	 Format
 Mute	 Mute	 Mute	 Mute
 PIP	 3D	 PIP	 3D
 Text	 Text	 Text	 Text
 Up / P+	 Up	 Up / P+	 Up
 Up / P+	 Ch +	 Up / P+	 Ch +
 Down / P-	 Down	 Down / P-	 Down
 Down / P-	 Ch -	 Down / P-	 Ch -
 Right / Vol+	 Right	 Right / Vol+	 Right
Right / Vol+	Vol +	Right / Vol+	Vol +
Left / Vol-	Left	Left / Vol-	Left
Left / Vol-	Vol -	Left / Vol-	Vol -
Menu	Menu	Menu	Menu
PIP Swap	Back	PIP Swap	Back
Auto	Options	Auto	Options
Sound	Dual	Sound	Dual





Originale	Sostituto
 Freeze / Hold	 +  Shift + Stop
 <<<	 <<<
 Play	 Play
 >>>	 >>>
 Rec	 Rec
 Stop	 Stop
 Pause	 Pause
 Red	 A Red
 Green	 B Green
 Yellow	 C Yellow
 Blue	 D Blue
 F1	 +  Shift + 1
 F2	 +  Shift + 2
 F3	 +  Shift + 3
 F4	 +  Shift + 4
 P-Pos	 +  Shift + Ch +
 P-Size	 +  Shift + Ch -

Originale	Sostituto
 Clock / Mix	 +  Shift + Text

