


 

 





 


 






Originale	Sostituto
 Standby/On	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 I<<<	 I<<< / Preset-
 >>>I	 >>>I / Preset+
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Open/Close	 Eject / Surround
 Timeshift	 Sleep / Timer
 Sat Link	 TV/Radio /
 Top Menu	 D.Menu / Top
 Setup	 Setup / OPT /

Originale	Sostituto
 Text	 Text / Goto
 Input Select	 AV / Input / RDS
 Menu/Pop Menu	 Menu / Home
 Up	 Up
 [i+]	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Return/Back	 Back / Return
 Prog+	 CH+ / Page+
 Display	 Display / Media
 Prog-	 CH- / Page-
 1	 1
 2	 2
 3	 3





Originale	Sostituto
4	4
5	5
6	6
7	7
8	8
9	9
Guide	Guide / EPG / -/--
0	0
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Rec Mode	Shift + Rec / Rec Mode
→/V.Replay	Shift + >>  / Preset+
AD	Shift + Audio / Lang I/II
Timer Prog	Shift + Sleep / Timer
Option	Shift + Setup / OPT / Tools

Originale	Sostituto
→/V.Skip	Shift + Right
Clear	Shift + Exit / Cancel / Clear
A1	Shift + 1
Disc	Shift + 3
HDD	Shift + 7

