




 











 











 











 



 







 

 















 

 






Originale	Sostituto	Originale	Sostituto
 Power	 Power	 PR +	 Up
 Mute	 Mute	 PR -	 Ch -
 1	 1	 PR -	 Down
 2	 2	 Vol +	 Vol +
 3	 3	 Vol +	 Right
 4	 4	 Vol -	 Vol -
 5	 5	 Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 SWAP	 Back
 8	 8	 16:9	 Format
 9	 9	 White / i	 Info
 0	 0	 Red	 Red
 -/--	 GUIDE	 Green	 Green
 AV / TV	 TV/R	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 TXT	 Text	 Stop	 Stop
 PR +	 Ch +	 Reveal	 Smart

Originale	Sostituto	Originale	Sostituto
 PR +	 Up	 TV	 AUX
 PR -	 Ch -	 DVD	 SAT
 PR -	 Down	 SLEEP	 REC MODE
 Vol +	 Vol +	 PLAY MODE	 STOP
 Vol +	 Right	 PAUSE	 EJECT
 Vol -	 Vol -	 SKIP BACKWARD	 SKIP FORWARD
 Vol -	 Left	 DISC NAV	 SOUND
 OK	 Ok	 AD	 SETTINGS
 SWAP	 Back	 LIST	 SUBT
 16:9	 Format	 DUAL	 OPT
 White / i	 Info	 SEARCH	 PICTURE
 Red	 Red	 E-MANUAL	 ECO
 Green	 Green	 REPEAT	 ZOOM
 Yellow	 Yellow	 TEXT	 TIMER
 Blue	 Blue	 TOP MENU	 AV
 Stop	 Stop	 MENU	 INFO
 Reveal	 Smart	 OK	 BACK





Originale	Sostituto
 Double	 Media
 SUB	 Subt
 MIX	 Shift + Text
 Update	 Eject

Originale	Sostituto

