






 

 


 
 



 
 
 

 



 

 





 
 




 

 

 

 



 

 



 












Originale		Sostituto		Originale		Sostituto	
	Power		Power		FAV		Pre Ch
	Source		AV		Exit		Exit
	Sleep		Sleep		Up		Up
	Picture Mode		Options		Left		Left
	Sound Mode		Dual		OK		Ok
	1		1		Right		Right
	2		2		Down		Down
	3		3		Menu		Menu
	4		4		EPG		Guide
	5		5		Vol +		Vol +
	6		6		Vol -		Vol -
	7		7		Audio		Shift + Dual
	8		8		Mute		Mute
	9		9		P +		Ch +
	0		0		P -		Ch -
	FAV +		Shift + Up		Red		Red
	FAV -		Shift + Down		Green		Green





Originale		Sostituto		Originale		Sostituto	
	Yellow		Yellow		[≡ i]		Media
	Blue		Blue				
	I<<		I<<				
	Play / Pause		Play				
	Play / Pause		Pause				
	>>I		>>I				
	<<		<<				
	Stop		Stop				
	>>		>>				
	Rec		Rec				
	Display		Info				
	[...]		Subt				
	[≡ ↓]		3D				
	[≡ ●]	 + 	Shift + Subt				
	[≡ □]	 + 	Shift + Stop				
	[≡]		Text				
	[?]		Smart				

