



 
 
Originale	Sostituto
Standby/On	Power
Input Select	AV
HDMI	D. Menu
Open/Close/Eject	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Setup	Options
Clear	Exit
Prog+	Ch +

Originale	Sostituto
Prog-	Ch -
Timer/Prog	Sleep
[i+]	Info
Text	Text
Variable Skip/→	Media
Variable Replay/→	Smart
Guide	Guide
Top Menu	Shift + Menu
Menu/List	Menu
Display	Shift + Info
Return/Back	Back
Up	Up
Down	Down
Right	Right
Left	Left
Enter/OK	Ok
Red	Red





Originale	Sostituto
 Green	 Green
 Yellow/System	 Yellow
 Blue/Search	 Blue
 <<	 <<
 Play	 Play
 >>	 >>
 I<<	 I<<
 Stop	 Stop
 >>I	 >>I
 Pause	 Pause
 VCR	 Shift + 1
 HDD	 Shift + 2
 DVD	 Shift + 3
 Time Shift	 List
 Dubbing	 Pre Ch
 Rec Speed	 3D
 Rec	 Rec

Originale	Sostituto
 Subtitle	 Subt
 1.3x/0.8xPlay	 Format
 Audio	 Dual
 Sat.Link	 TV/R
 A1	 Shift + Subt

