




















Originale	Sostituto	Originale	Sostituto
Audio	 Audio / Lang I/II	PRG	 TV/Radio /
AFFICHE	 Power	CLR - EFF	 Exit / Cancel / Clear
Open / Close - OUVRE/FERME	 Eject / Surround	Up	 Up
Angle	 Info / Angle	Left	 Left
1	 1	OK	 OK
Subtitle - SOUS TITRE	 Subtitle / EQ	Title - TITRE	 Sound / Title
Search -	 Red / Netflix / Search	Right	 Right
2	 2	Down	 Down
3	 3	Vol+	 Vol+
4	 4	MODE	 Smart / List
5	 5	Vol-	 Vol-
6	 6	ZOOM	 Zoom / Size
7	 7	A-B	 Yellow / YouTube / Repeat
8	 8	STOP	 Stop / Hold
9	 9	MARK -	 Fav / Marker / PC
0	 0	Return -	 Back / Return
Menu	 Menu / Home	Setup - REGL	 Setup / OPT /

Originale	Sostituto	Originale	Sostituto
PRG	 TV/Radio /	CLR - EFF	 Exit / Cancel / Clear
Up	 Up	Left	 Left
OK	 OK	Title - TITRE	 Sound / Title
Right	 Right	Down	 Down
Vol+	 Vol+	MODE	 Smart / List
Vol-	 Vol-	ZOOM	 Zoom / Size
A-B	 Yellow / YouTube / Repeat	STOP	 Stop / Hold
MARK -	 Fav / Marker / PC	Return -	 Back / Return
Setup - REGL	 Setup / OPT /		





Originale	Sostituto
F.Rwd - AR.RAPID	TUNE- << / Tune-
F.Fwd - AV.RAPID	TUNE+ >> / Tune+
Mute -	DIMMER MUTE Mute / Dimmer
Slow R -	CH PAGE - CH- / Page-
Slow F -	CH PAGE + CH+ / Page+
Skip+ / SAUT+	PRESET+ >>I / Preset+
Skip- / SAUT-	PRESET- I<< / Preset-
PAUSE/IMAGE	STEP - FREEZE Pause / Step / Freeze
Play - LECTURE	SLOW Play / Slow

Originale	Sostituto

