 

 

 



 

 

 

 

 



 

 
 
 

 

 

 
 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Ch+		Ch +
	Display	 + 	Shift + Info		Ch-		Ch -
	Nicam/A2		List		Vol+		Vol +
	Mute		Mute		Vol-		Vol -
	PMode	 + 	Shift + Format		1		1
	SMode	 + 	Shift + Dual		2		2
	Sleep		Sleep		3		3
	Aspect		3D		4		4
	LCD-Menu		Menu		5		5
	DVB-Menu		D. Menu		6		6
	Source		AV		7		7
	Exit		Exit		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		Text		Text
	Left		Left		Hold		Media
	Enter		Ok		Red		Red





Originale		Sostituto		Originale	Sostituto
	Green		Green		
	Yellow		Yellow		
	Cyan		Blue		
	Index		Smart		
	Size		Format		
	Reveal		Options		
	Subpage		Eject		
	Tv/Radio		TV/R		
	Lang		Dual		
	Page-		I<<		
	Page+		>>I		
	Subtitle		Subt		
	Epg		Guide		
	Fav		Pre Ch		
	Info		Info		

