



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red / F1	 Red / Netflix / Search
 Green / F2	 Green / APP / Repeat
 Yellow / F3	 Yellow / YouTube / Repeat
 Blue / F4	 Blue / Prime Video / Random
 <<<	 <<< / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>>	 >>> / Tune+
 V.Format	 Picture / Format
 Resolution	 Zoom / Size
 Subtitle	 Subtitle / EQ
 Rec	 Rec / Rec Mode
 Option	 Setup / OPT /
 Audio	 Audio / Lang I/II

Originale	Sostituto
 Text	 Text / Goto
 SAT	 Shift + 0
 Info	 Info / Angle
 Recall	 Back / Return
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 FAV	 Fav / Marker / PC
 Page +	 CH+ / Page+
 Vol -	 Vol-
 EPG	 Guide / EPG / -/--
 Page -	 CH- / Page-





Originale		Sostituto	
1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
0	0	HDMI - SAT	0
TV/RADIO	TV / Radio	PROGRAM TV/RADIO	TV/Radio /

Originale		Sostituto	





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red / F1	 Red / Netflix / Search
 Green / F2	 Green / APP / Repeat
 Yellow / F3	 Yellow / YouTube / Repeat
 Blue / F4	 Blue / Prime Video / Random
 <<<	 <<< / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>>	 >>> / Tune+
 V-Format	 Picture / Format
 Resolution	 Zoom / Size
 Subtitle	 Subtitle / EQ
 Rec	 Rec / Rec Mode
 Option	 Setup / OPT /
 Audio	 Audio / Lang I/II

Originale	Sostituto
 Text	 Text / Goto
 SAT	 Shift + 0
 Info	 Info / Angle
 Recall	 Back / Return
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 Page+	 CH+ / Page+
 Vol-	 Vol-
 EPG	 Guide / EPG / -/--
 Page-	 CH- / Page-





Originale	Sostituto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
SLEEP	SLEEP / Timer
0	0
TV/RADIO	TV/Radio /

Originale	Sostituto

