







 





 



 




 






 







 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P+	 Up
 1	 1	 V-	 Vol-
 2	 2	 V-	 Left
 3	 3	 Menu	 Menu / Home
 4	 4	 Menu	 OK
 5	 5	 V+	 Vol+
 6	 6	 V+	 Right
 7	 7	 P-	 CH- / Page-
 8	 8	 P-	 Down
 9	 9	 Tv	 TV/Radio /
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 0	 0	 Av	 AV / Input / RDS
 16:9	 Picture / Format	 Red	 Red / Netflix / Search
 S/M/D	 Display / Media	 Green	 Green / APP / Repeat
 PP	 Back / Return	 Yellow	 Yellow / YouTube / Repeat
 →←	 Smart / List	 Blue	 Blue / Prime Video / Random
 P+	 CH+ / Page+	 ≡Text	 Text / Goto

Originale	Sostituto	Originale	Sostituto
 P+	 Up	 TV	 DVD
 V-	 Left	 Exit	 SAT
 Menu	 Menu / Home	 Av	 AUX
 Menu	 OK	 Red	 REC MODE
 V+	 Vol+	 Green	 SLOW STEP-FREEZE
 V+	 Right	 Yellow	 HOLD
 P-	 CH- / Page-	 Blue	 PRESET-
 P-	 Down	 ≡Text	 PRESET+
 Tv	 TV/Radio /	 Text / Goto	 TUNE+
 Exit	 Exit / Cancel / Clear		 TUNE-
 Av	 AV / Input / RDS		 PRESET-
Red	Red / Netflix / Search		EQ
Green	Green / APP / Repeat		SURROUND
Yellow	Yellow / YouTube / Repeat		SOUND
Blue	Blue / Prime Video / Random		AUDIO
≡Text	Text / Goto		SUBTITLE
			TIMER
			PROGRAM
			TV RADIO
			RDS
			AV INPUT
			HOME
			ANGLE
			MENU
			INFO
			OK
			RETURN
			BACK
			CLEAR
			EXIT
			CANCEL
			LIST
			SMART
			MEDIA
			DISPLAY
			CH PAGE
			VOL+
			VOL-
			TV
			DVD
			CD-STB
			1
			2
			3
			VIDEO
			TAPE
			TUNER
			AUX-HDD
			USB
			BLUETOOTH
			7
			8
			9
			GUIDE EPG
			HDMI-BAT
			FC
			0
			FAV MARKER
			NETFLIX
			APP
			YouTube
			Prime Video
			SEARCH
			REPEAT
			REPEAT A-B
			RANDOM





Originale		Sostituto	
	/≡ Mix		Audio / Lang I/II
	≡☺ Time Page		Subtitle / EQ
	Info		Info / Angle
	Guide / EPG / -/--		
	Fav / Marker / PC		
	Setup / OPT /		
	Cancel		Zoom / Size
	Reveal		D.Menu / Top

Originale		Sostituto	

