

 

 





 


 

 
 

 
 
 





 



 
 




Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Volume+	 Vol +
Mute	 Mute	Chan.Up	 Ch +
Update	 Play	Volume-	 Vol -
Reveal	 Pause	Chan.Down	 Ch -
Subt.List	 Subt	1	 1
Sleep Timer	 Sleep	2	 2
Return TV	 TV/R	3	 3
Txt Expand	 Eject	4	 4
TV/AV	 AV	5	 5
Menu	 Menu	6	 6
Menu Up	 Up	7	 7
Display	 Info	8	 8
Menu Left	 Left	9	 9
OK Enter	 Ok	Guide -/-- 1.	 Guide
Menu Right	 Right	0/10	 0
Menu Down	 Down	2.Fav P/C 2.	 Pre Ch
Back	 Back	Red	 Red



Originale	Sostituto	Originale	Sostituto
Green	 B	Green	
Yellow	 C	Yellow	
Blue	 D	Blue	

