 

 
 



 










 
 

 









 






Originale	Sostituto
 Power	 Power
 Tv/Radio	 TV/R
 3D	 3D
 Guide	 Guide
 Info	 Info
 Ratio	 Format
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 List	 List
 Settings	 Shift + Options
 Q.View	 Pre Ch
 Q.Menu/3D	 Media
 Up	 Up
 Mute	 Mute
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Back	 Back
 FAV	 Smart
 FAV	 Shift + Pre Ch
 Exit	 Exit
 PIP/AD	 Dual
 Vol+	 Vol +
 Vol-	 Vol -





Originale		Sostituto		Originale		Sostituto	
	P+		Ch +				
	P-		Ch -				
	Red		Red				
	Green		Green				
	Yellow/*-		Yellow				
	Blue/*+		Blue				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	Subtitle		Subt				
	<<		<<				
	>>		>>				
	Text		Text				
	T.Opt		Options				

